


TOUR PRO BUNKER RAKE

11700-11790

ASSEMBLY INSTRUCTIONS:

- * ASSEMBLE HANDLE INTO HEAD
- * PRE-DRILL MOUNTING SCREW HOLE USING A #6 DRILL BIT
- * INSERT MOUNTING SCREW UNTIL TIGHT

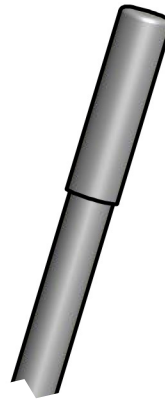

TOUR PRO BUNKER RAKE

Part # Description

11700	20" (51cm) TOUR PRO/54" (137 cm) GREEN COMPOSITE HANDLE
11720	20" (51cm) TOUR PRO/60" (152 cm) GREEN GATOR GRIP HANDLE
11730	20" (51cm) TOUR PRO/60" (152 cm) BROWN GATOR GRIP HANDLE
11750	20" (51cm) TOUR PRO/64" (163 cm) GREEN ALUMINUM CURVED HANDLE
11770	25" (64cm) TOUR PRO/72" (183 cm) GREEN GATOR GRIP HANDLE
11780	25" (64cm) TOUR PRO/72" (183 cm) BROWN GATOR GRIP HANDLE
11790	25" (64cm) TOUR PRO/60" (152cm) GREEN GATOR GRIP HANDLE

11710	54" (137 cm) GREEN COMPOSITE HANDLE
11200	60" (152 cm) GREEN GATOR GRIP HANDLE
11201	60" (152 cm) BROWN GATOR GRIP HANDLE
11541	64" (163 cm) GREEN ALUMINUM CURVED HANDLE
11210	72" (183 cm) GREEN GATOR GRIP HANDLE
11211	72" (183 cm) BROWN GATOR GRIP HANDLE

Part # Description

11810	MOUNTING SCREW
-------	----------------

Part # Description

11701	20" (51 cm) TOUR PRO HEAD
11771	25" (64 cm) TOUR PRO HEAD

