


**ASSEMBLY INSTRUCTIONS:**

- \* ASSEMBLE HANDLE INTO HEAD
- \* PRE-DRILL MOUNTING SCREW HOLE USING A #6 DRILL BIT
- \* INSERT MOUNTING SCREW UNTIL TIGHT

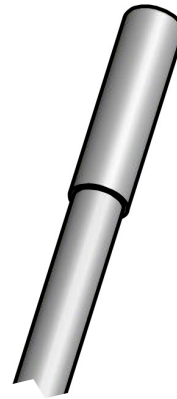

**TOUR SMOOTH II BUNKER RAKE**

**Part # Description**

11800	15" (38 cm) TOUR SMOOTH II/54" (137 cm) GREEN COMPOSITE HANDLE
11820	15" (38 cm) TOUR SMOOTH II/60" (152 cm) GREEN GATOR GRIP HANDLE
11830	15" (38 cm) TOUR SMOOTH II/60" (152 cm) BROWN GATOR GRIP HANDLE
11850	15" (38 cm) TOUR SMOOTH II/64" (163 cm) GREEN ALUMINUM CURVED HANDLE
12210	22" (56 cm) TOUR SMOOTH II/60" (152 cm) GREEN GATOR GRIP HANDLE
12220	22" (56 cm) TOUR SMOOTH II 72" (183 cm) GREEN GATOR GRIP HANDLE

11710	54" (137 cm) GREEN COMPOSITE HANDLE
11200	60" (152 cm) GREEN GATOR GRIP HANDLE
11201	60" (152 cm) BROWN GATOR GRIP HANDLE
11541	64" (163 cm) GREEN ALUMINUM CURVED HANDLE
11210	72" (183 cm) GREEN GATOR GRIP HANDLE

**Part # Description**

11810	MOUNTING SCREW
-------	----------------

**Part # Description**

11801	15" (51 cm) TOUR SMOOTH II HEAD
-------	---------------------------------

